



Bath and Kitchen Accessories S.L.
Bajada El Caleruco, 21A
39012 Santander
SPAIN
t +34 942 05 66 60
f +34 942 34 39 02
bandk@bathkitchens.com
www.bathkitchens.com

INSTRUCCIONES DE MONTAJE

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS DE MONTAGE


KIT DE MUEBLE CON LAVABO Y ESPEJO **VENECIA**

SET OF CABINET, WASHBASIN AND MIRROR **VENECIA**


ENSEMBLE MEUBLE, VASQUE ET MIROIR **VENECIA**

REF. 10.005

400x200x500

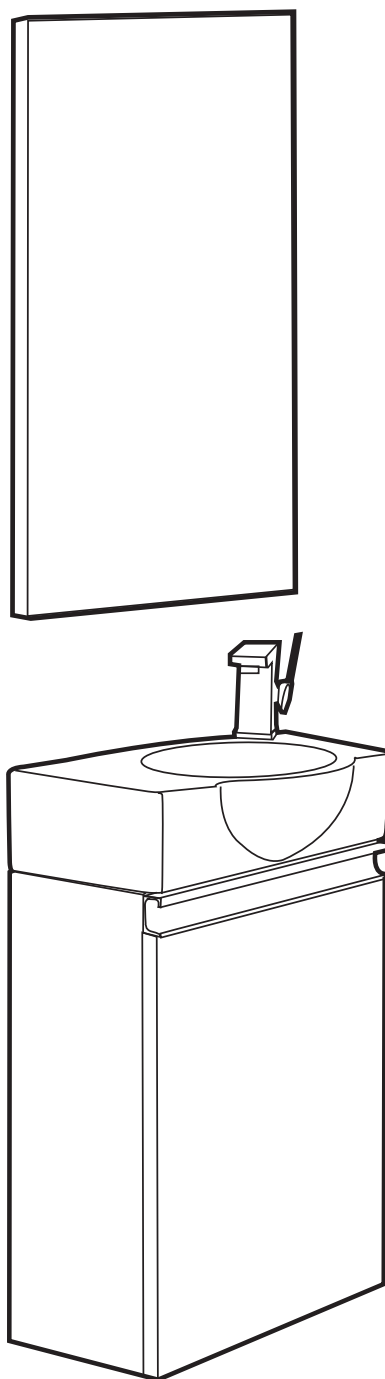


ref. L

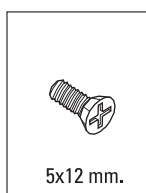

5x12 mm.

4x


ref. B

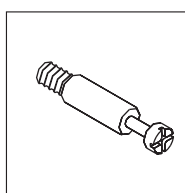

4x16 mm.


8x

ref. P1

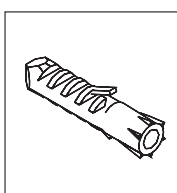

2x


ref. T

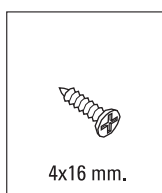

4x16 mm.

8x


ref. Q

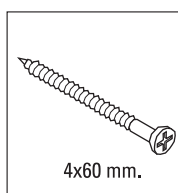

4x60 mm.


2x

ref. C1

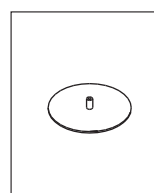


8x

ref. M & ref. N

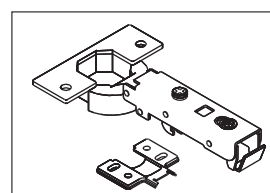


2x

1

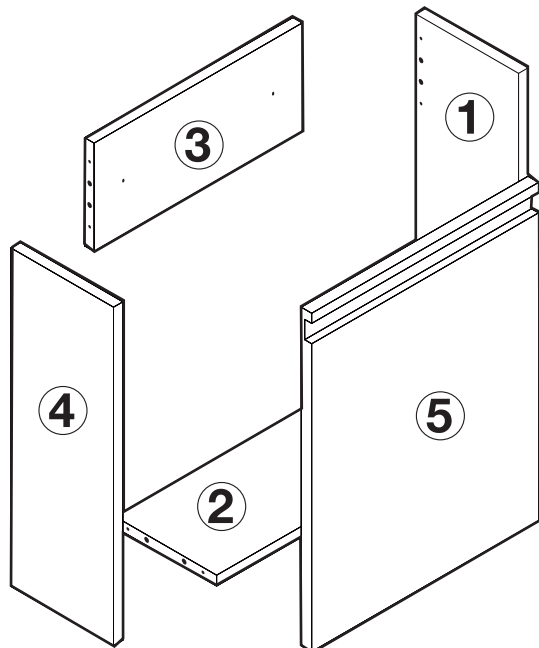


1	1x	500x173 mm.
2	1x	353x172,5 mm.
3	1x	500x160 mm.
4	1x	500x173 mm.
5	1x	383,5x497 mm.


2

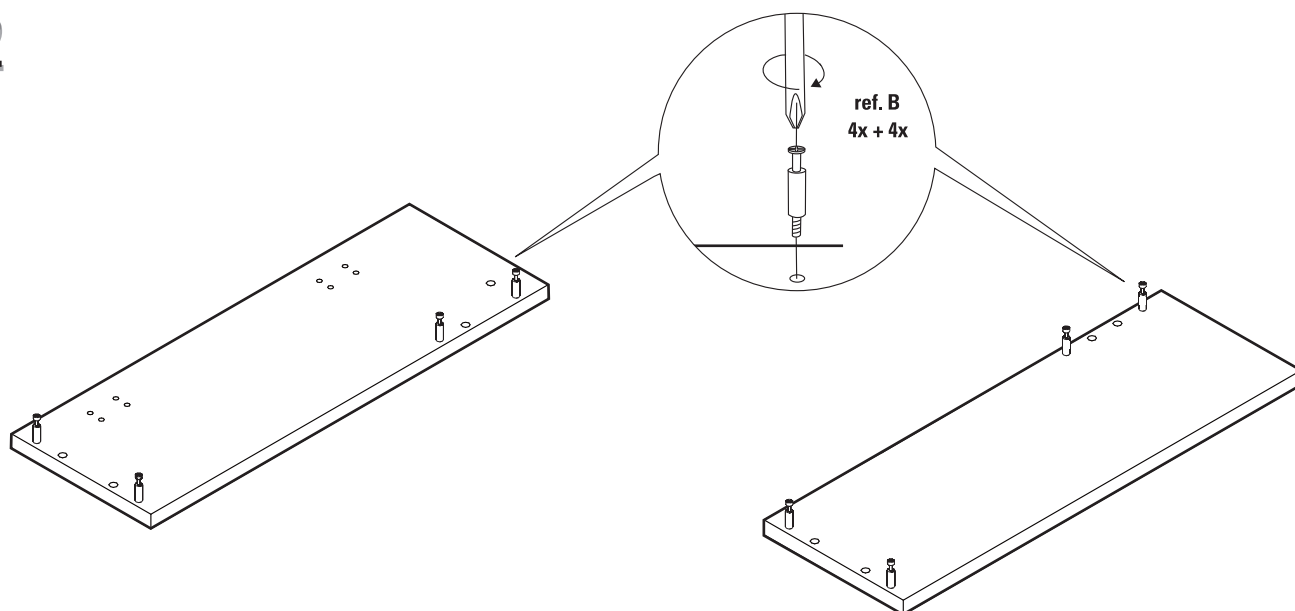


3

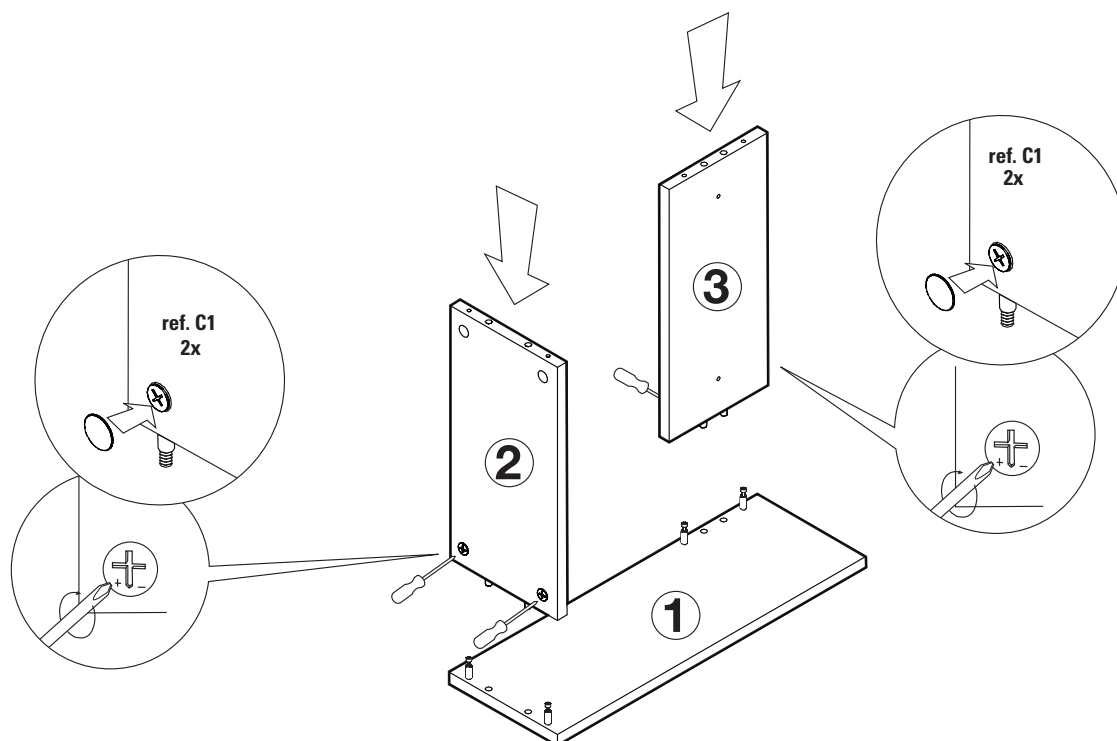


4

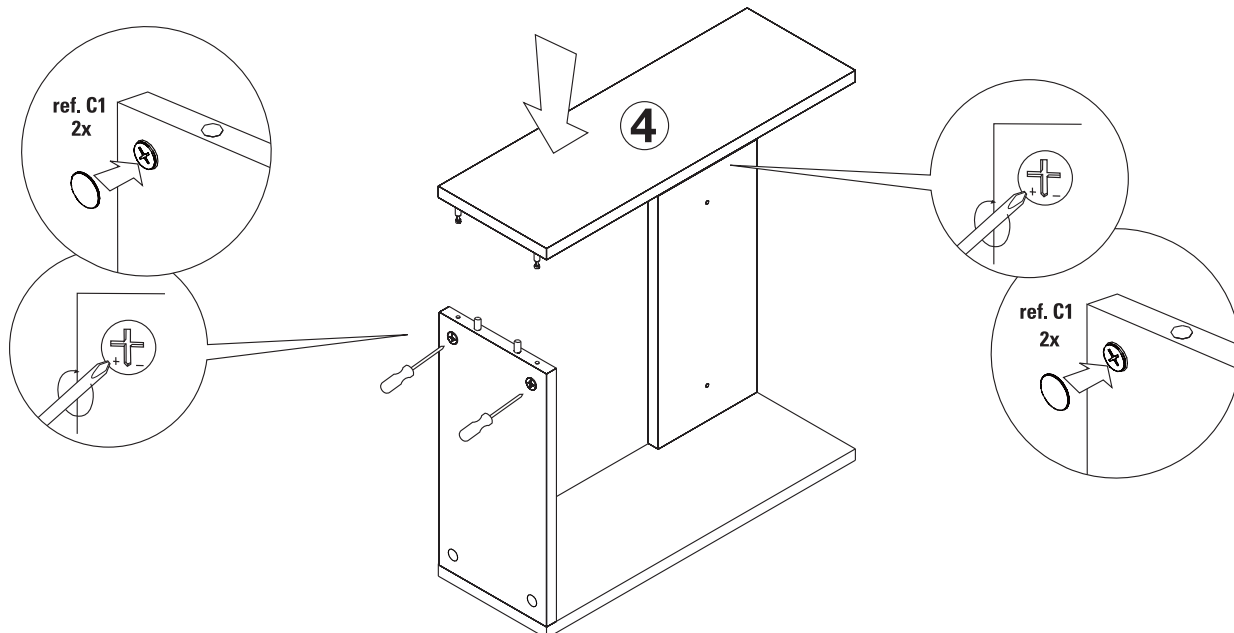

5

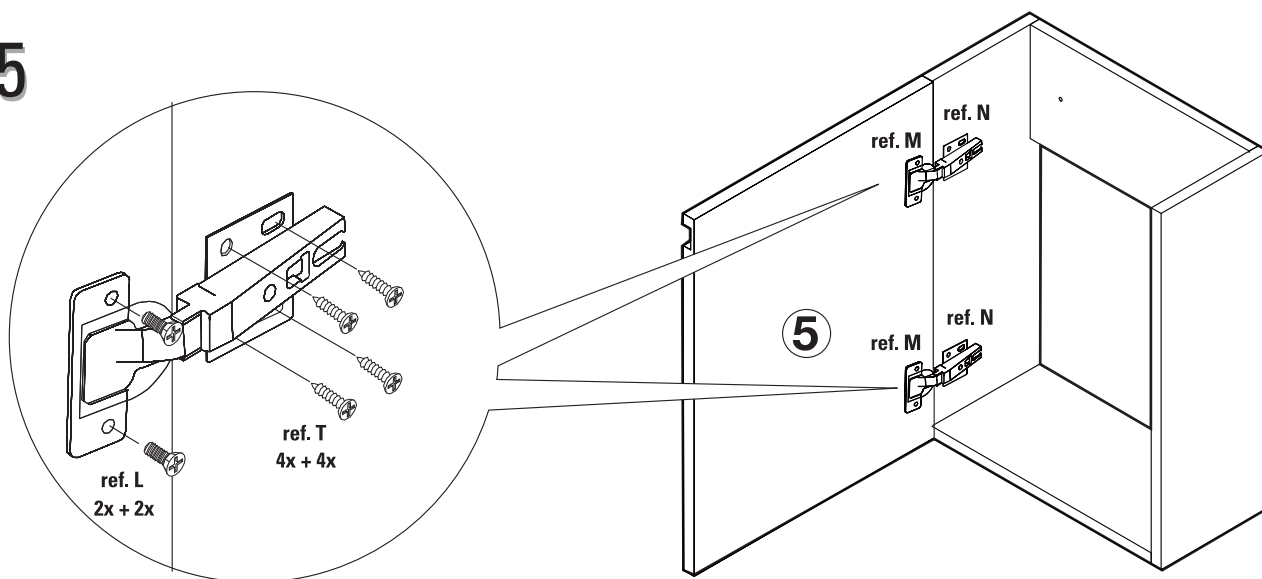

6

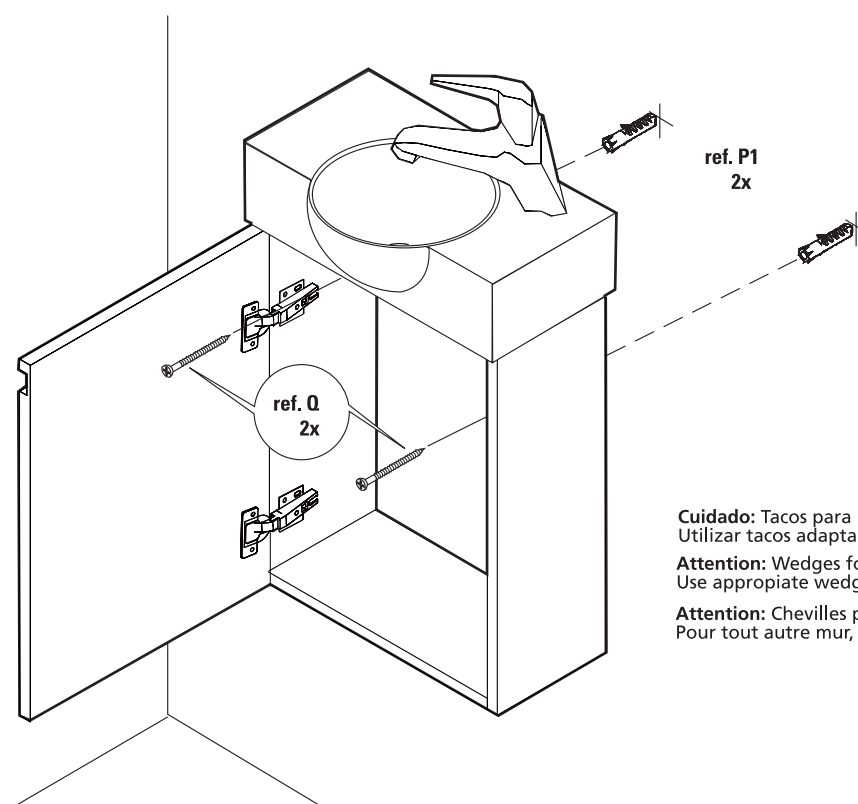

Cuidado: Tacos para paredes macizas.
Utilizar tacos adaptados para cada tipo de pared

Attention: Wedges for solid wall.
Use appropriate wedges for each type of wall.

Attention: Chevilles pour murs pleins.
Pour tout autre mur, utiliser des chevilles adaptées.