



**Bath and Kitchen Accessories S.L.**  
Bajada El Caleruco, 21A  
39012 Santander  
SPAIN  
t +34 942 05 66 60  
f +34 942 34 39 02  
bandk@bathkitchens.com  
www.bathkitchens.com



INSTRUCCIONES DE MONTAJE

ASSEMBLY INSTRUCTIONS


INSTRUCTIONS DE MONTAGE

**KIT DE MUEBLE CON LAVABO Y ESPEJO PARÍS**  
**SET OF CABINET, WASHBASIN AND MIRROR PARIS**  
**ENSEMBLE MEUBLE, VASQUE ET MIROIR PARIS**

**REF. 10.023**  
450x300x350

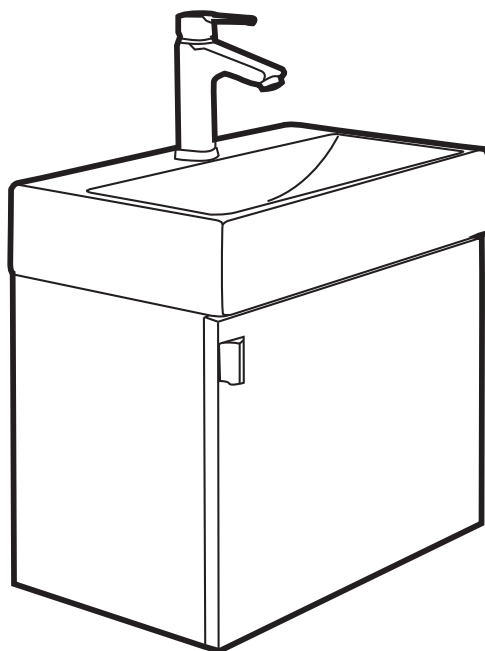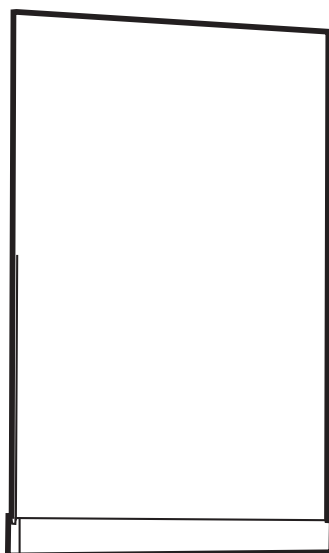


ref. H

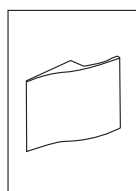

1x


ref. I

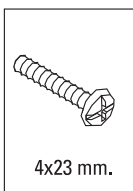

4x23 mm.

2x


ref. L



5x13 mm.


4x

ref. B

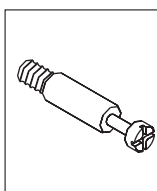


10x

ref. P

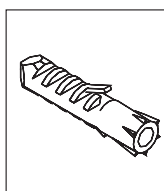

4x


ref. T



4x16 mm.

8x


ref. Q1

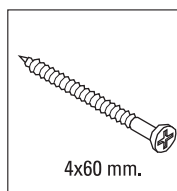

4x60 mm.


4x

ref. C1




10x

ref. M & ref. N

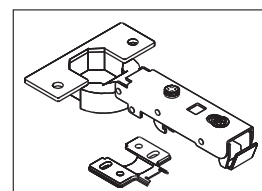


2x

# 1

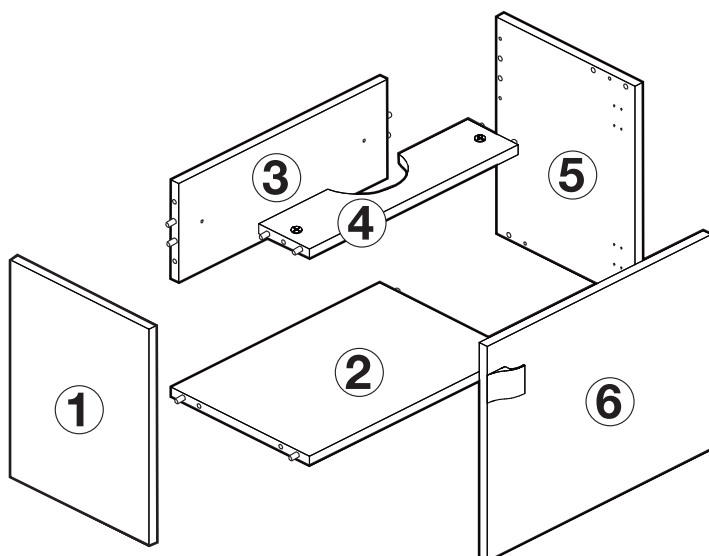


<b>1</b>	1x	350x274x16mm.
<b>2</b>	1x	412x274x16 mm.
<b>3</b>	1x	412x160x16 mm.
<b>4</b>	1x	412x100x16 mm.
<b>5</b>	1x	350x274x16 mm.
<b>6</b>	1x	442x347x16 mm.


# 2

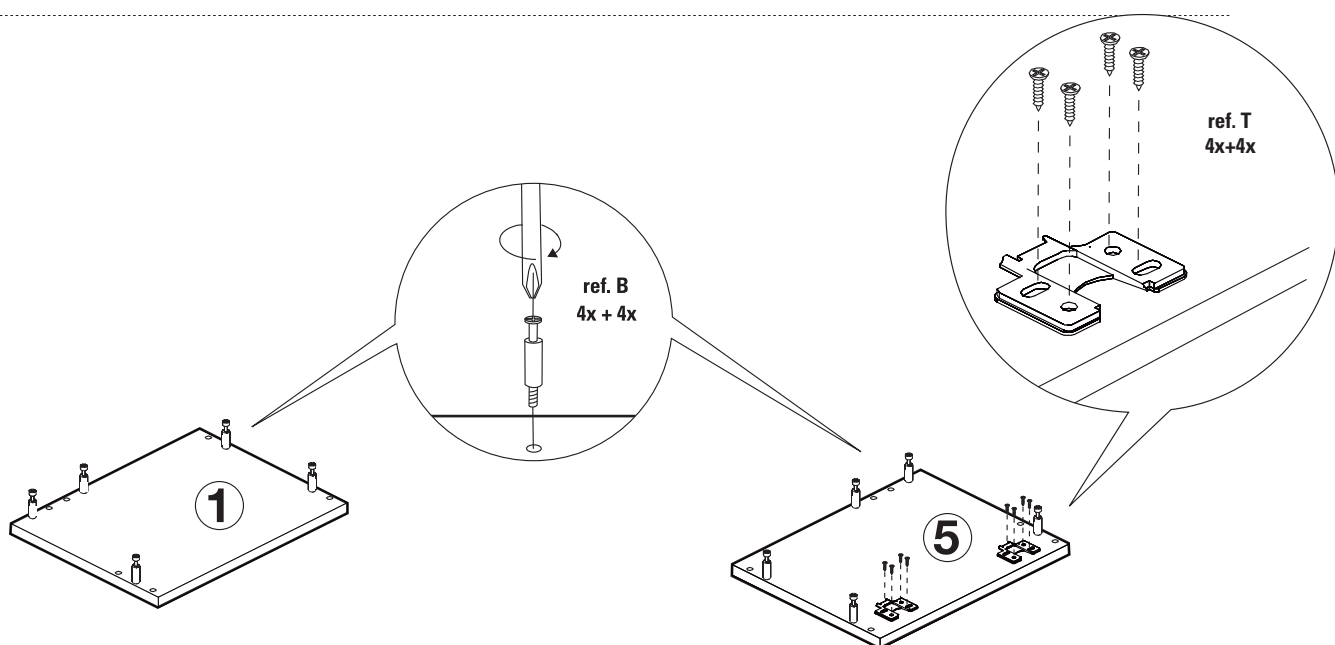

# 3

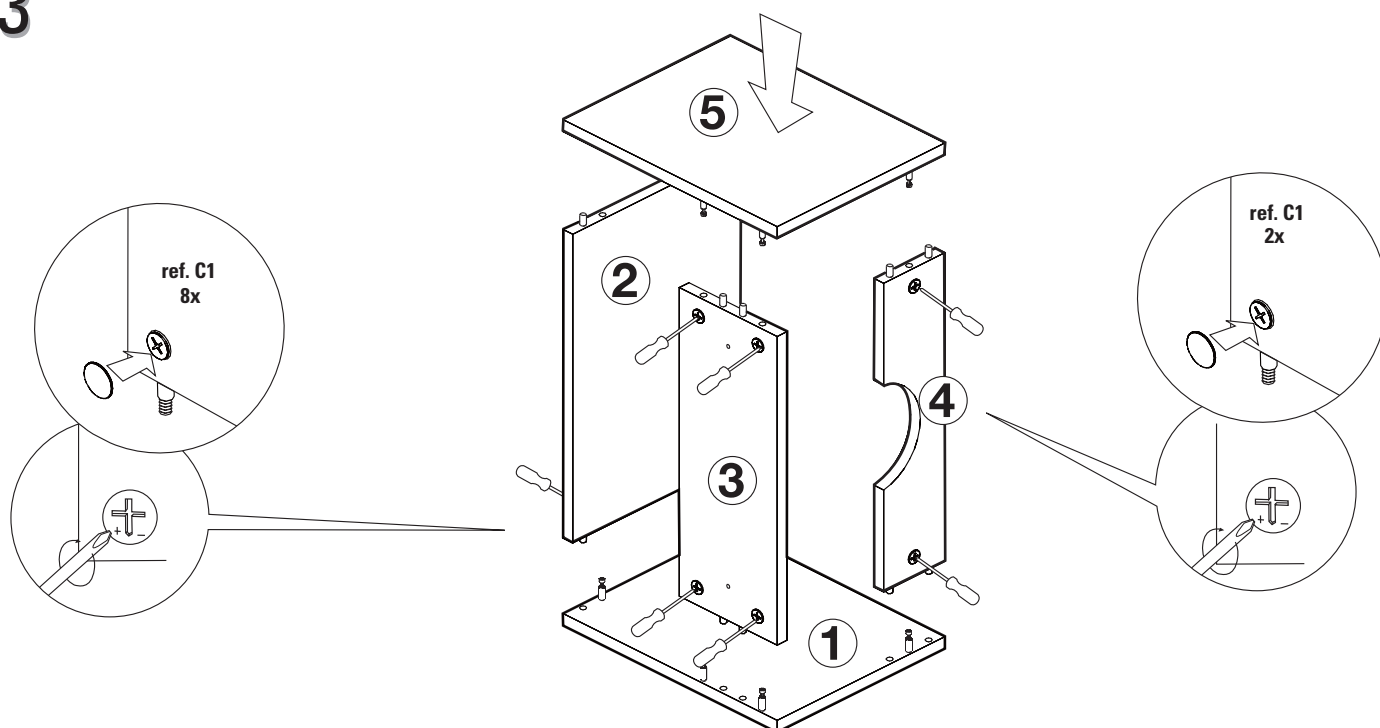

4

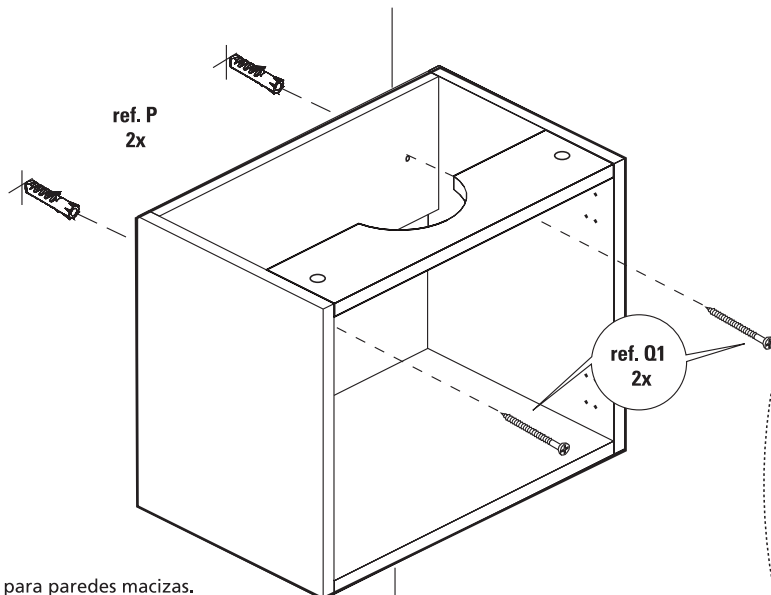


**Cuidado:** Tacos para paredes macizas.  
Utilizar tacos adaptados para cada tipo de pared


**Attention:** Wedges for solid wall.  
Use appropriate wedges for each type of wall.

**Attention:** Chevilles pour murs pleins.  
Pour tout autre mur, utiliser des chevilles adaptées.

5

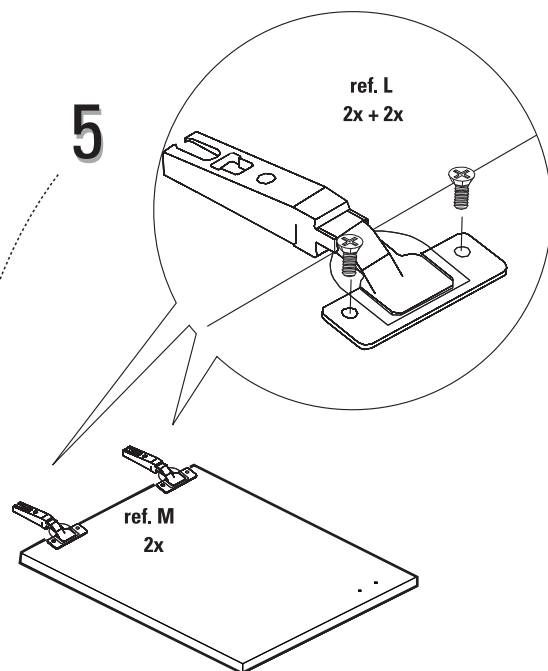

5

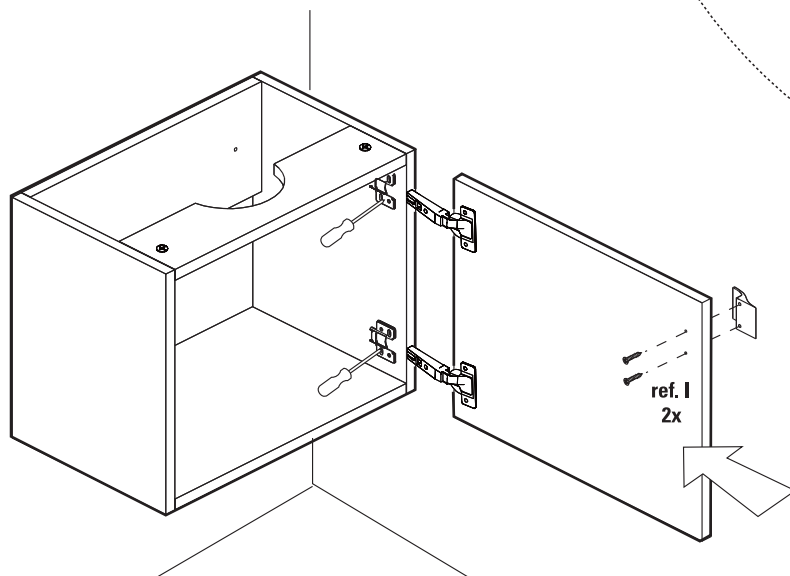

6

