



PATAS DE MADERA
WOODEN LEGS
SUPPORT EN BOIS

REF.
10104

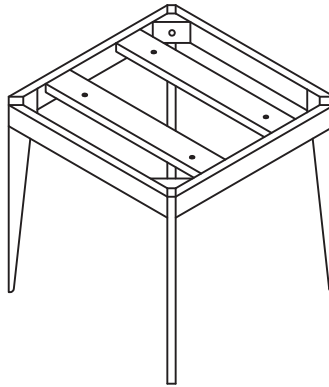


PART LIST

No.	Draw	QTY	Master part:
A		4	A: Screw (M6x50mm)

Tools you will need-outils requis



Screwdriver




Hammera






Wrench

REPLACEMENT PARTS

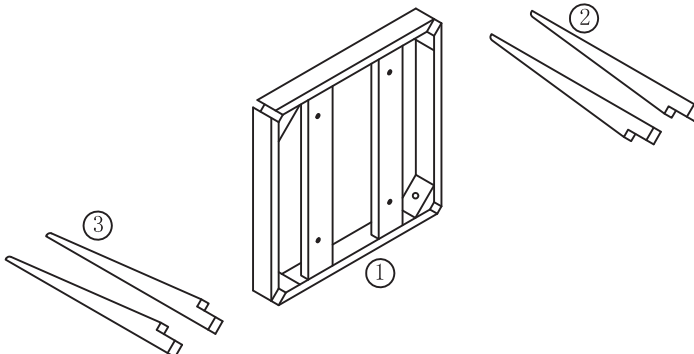

Step 01

Step 02

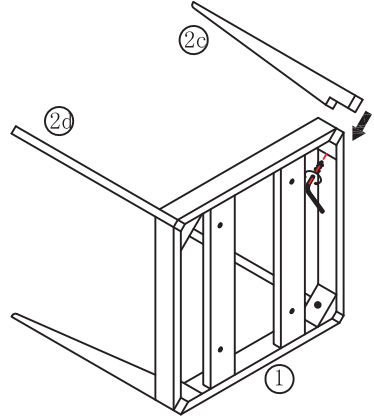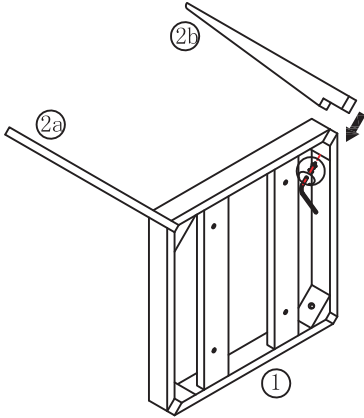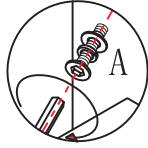

Finished

